

# Setup Electronic Start Device

(25 September 2019)

### Start Device Pro

- Start sounds : Beep or bang
- Recall : Through speakers
- Starters Voice Commands : Through speakers (optional microphone P1125)

### Start Device Club

- Start sounds : Beep or bang
- Recall : Through Speakers
- Starters Voice Commands : Voice of Starter only, not through speakers

### Configuration content:

#### TTC063 Electronic Start Device Pro

- P978 Electronic Start Device Pro
- P1117 Electronic Start Device Pro Connection Cable
- P1096 Electronic Start Device Interface

#### TTC064 Electronic Start Device Club

- P1104 Electronic Start Device Club
- P1096 Electronic Start Device Interface

#### TTC067 SpeakerBox for Electronic Start System

- P72 Battery charger – 220 VAC, 12VDC, 0.9A
- P1102 SpeakerBox excl. Printer
- P1111 Ready LED for SpeakerBox

### Configuration content optional products:

#### TTC068 Additional speaker

- P1103 38W Loudspeaker

#### TTP1123 Carrying case for Electr. Start Device


#### TTP1125 Neckworn microphone (only for Electronic Start System Pro)



P1123  
Carrying case for Electronic Start System,  
compatible for both Club or Pro system  
(shown products not included)

**Tip:**  
You can mount on starters stand,  
starter stand not included

**Remark:**  
- plug in to use SpeakerBox  
- Unplug to save battery  
- Use plug to charge internal battery

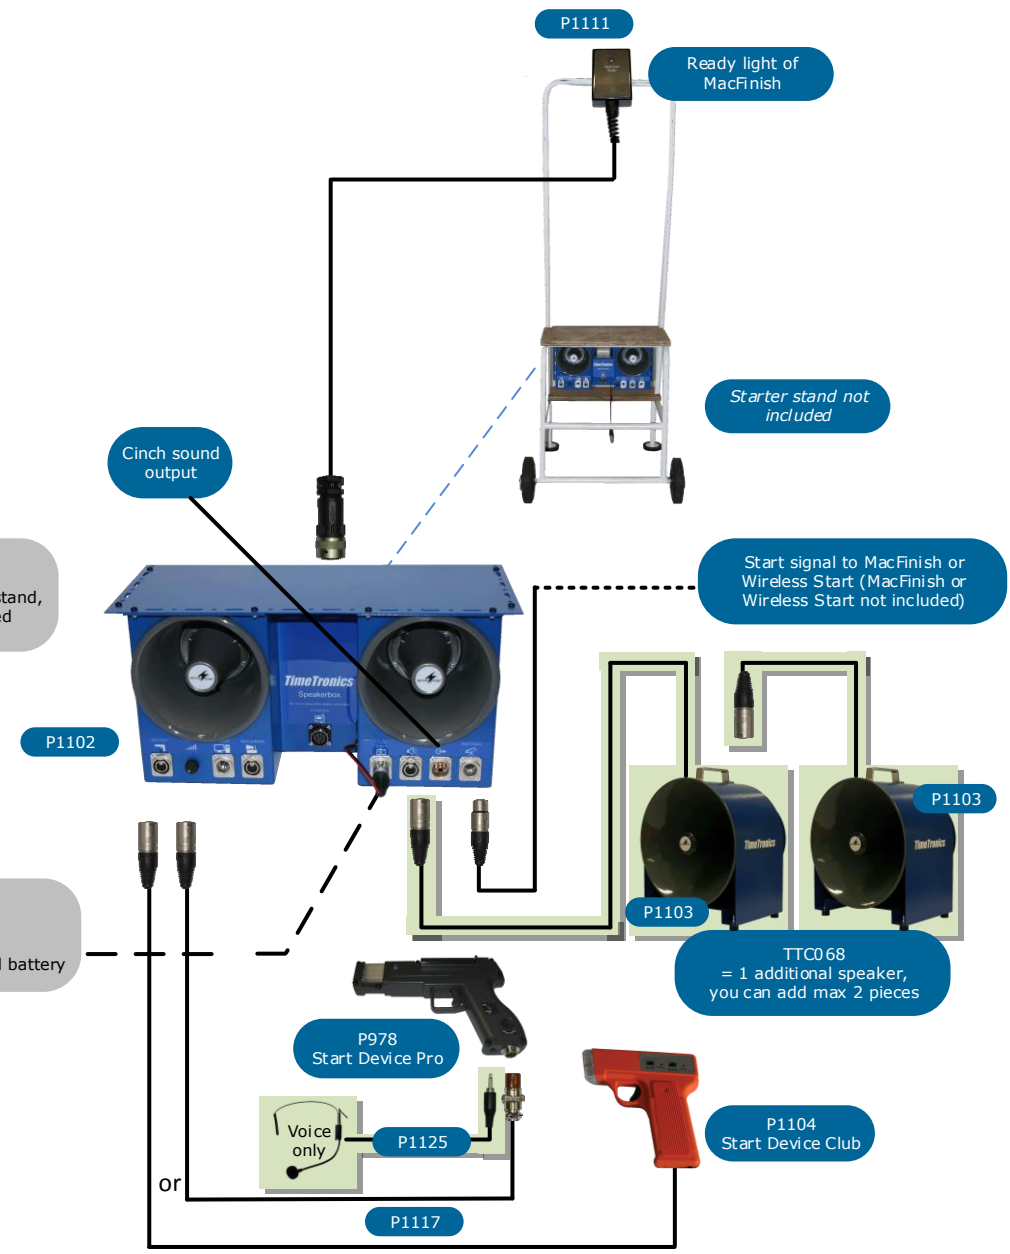

= Optional product